

Sonic Cleaner



How to Use:

The product can operate either by USB cable (included) or by batteries (not included)

Battery compartment is located at the bottom of the product.

1. Remove the battery cover and install 3 x AA batteries (not included) according to right polarities
2. Close the battery cover.
3. Open the cover on the top of the product's body and fill 2 / 3 of the container capacity with water.
4. Pour in the cleaning detergent into the container, turn ON the power switch of the machine body and start cleaning.
5. Press the switch once, one blue light will be on and the washer will start to work one second later with the setting timing of 5 minutes
6. Press the switch twice continuously, two blue lights will be on and the washer will start to work one second later, with the setting timing of 10 minutes
7. Press the switch three times continuously, three blue lights will be on, and the washer will start to work one second later, with the setting timing of 15 minutes.

After the timing function is turned on, the timing will be automatically timed out.

One blue light will be turned off every 5 minutes until the timing is over.

All the blue lights will be turned off and the washer will stop working.

If it is necessary to stop the cleaning work in the middle of the process, press the ON key once, and the washer will stop working.

After the washer stops working, take the cleaned object out.

Wash the cleaned object with clean water before use

Capacity: 500ml

Motor Power: 6,800 RPM, approx. 110Hz

Points for attention:

1. Do not place the product in direct sunlight, high temperatures, damp or dusty places.
2. Do not let the battery compartment come in contact with water
3. Always place the product in a horizontal position while in use
4. Remove the batteries to prolong the battery life of the product if not in use

Battery Warning:

Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries (including hydride)

Do not mix old and new batteries

Exhausted batteries are to be removed

The supply terminals are not to be short-circuited

Only batteries of the same or equivalent type as recommended are to be used

Batteries are to be inserted with the correct polarity

Battery Disposal:

The wheelie bin symbol indicates the product and batteries must not be disposed of in the domestic waste as they can contain substances that are damaging to the environment.

Please use designated collection points or recycling facilities when disposing of the item or batteries. Batteries should be removed from the product.

Contact your local waste disposal agency or your retailer for further information